

## Bluecam. Omnicam PC removal Guide

Removing the Pc is very simple. A total of 10 screws need to be removed, All are size Tx20 screws

Step one: Remove 3 cover panels, upper, lower and battery cover (unplug battery also). Remove circled screws, 6 of them. Three have white caps on them, remove these first. Then remove the back panel



Step 2: Unplug every cord going to the PC. Remove the Circled screws. 4 of them. Now you can slide the PC out using the Handle on the top.

